# **BookletChart**<sup>TM</sup>

# NOAR TOWN U.S. DEPARTMENT OF COMMERCE


## Columbia River – McNary Dam to Juniper

NOAA Chart 18541

A reduced-scale NOAA nautical chart for small boaters When possible, use the full-size NOAA chart for navigation.



- Complete, reduced-scale nautical chart
- Print at home for free
- Convenient size
- Up-to-date with Notices to Mariners
- Compiled by NOAA's Office of Coast Survey, the nation's chartmaker

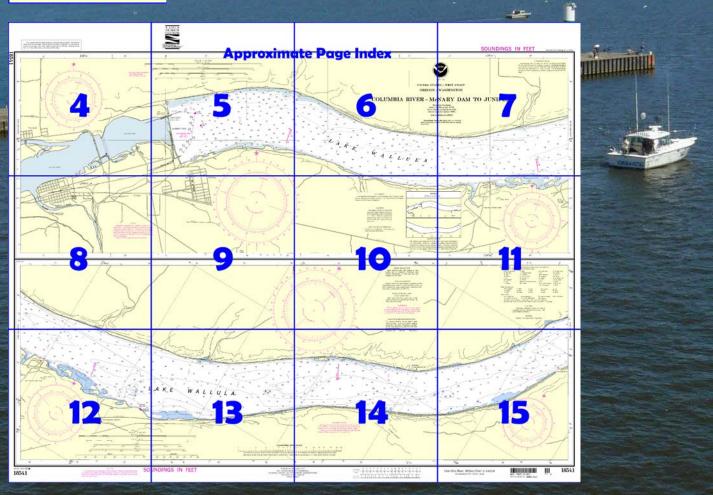

### Published by the National Oceanic and Atmospheric Administration National Ocean Service Office of Coast Survey

<u>www.NauticalCharts.NOAA.gov</u> 888-990-NOAA

#### What are Nautical Charts?

Nautical charts are a fundamental tool of marine navigation. They show water depths, obstructions, buoys, other aids to navigation, and much more. The information is shown in a way that promotes safe and efficient navigation. Chart carriage is mandatory on the commercial ships that carry America's commerce. They are also used on every Navy and Coast Guard ship, fishing and passenger vessels, and are widely carried by recreational boaters.

#### What is a BookletChart<sup>™</sup>?

This BookletChart is made to help recreational boaters locate themselves on the water. It has been reduced in scale for convenience, but otherwise contains all the information of the full-scale nautical chart. The bar scales have also been reduced, and are accurate when used to measure distances in this BookletChart. See the Note at the bottom of page 5 for the reduction in scale applied to this chart.

Whenever possible, use the official, full scale NOAA nautical chart for navigation. Nautical chart sales agents are listed on the Internet at http://www.NauticalCharts.NOAA.gov.

This BookletChart does NOT fulfill chart carriage requirements for regulated commercial vessels under Titles 33 and 44 of the Code of Federal Regulations.

#### **Notice to Mariners Correction Status**

This BookletChart has been updated for chart corrections published in the U.S. Coast Guard Local Notice to Mariners, the National Geospatial Intelligence Agency Weekly Notice to Mariners, and, where applicable, the Canadian Coast Guard Notice to Mariners. Additional chart corrections have been made by NOAA in advance of their publication in a Notice to Mariners. The last Notices to Mariners applied to this chart are listed in the Note at the bottom of page 7. Coast Pilot excerpts are not being corrected.

For latest Coast Pilot excerpt visit the Office of Coast Survey website at <a href="http://www.nauticalcharts.noaa.gov/nsd/searchbychart.php?chart=185">http://www.nauticalcharts.noaa.gov/nsd/searchbychart.php?chart=185</a> 41.



(Selected Excerpts from Coast Pilot)
McNary Lock and Dam, 254.5 (292.9)
miles above the mouth of the Columbia
River and just above Umatilla, has a
single lift lock with a vertical lift of about
75 feet. A restricted area is above the
dam. (See 207.718, chapter 2, for
information concerning use,
administration, and navigation of
McNary Lock and Dam.) Depths and
overhead clearances are at normal pool

Lake Wallula, the pool created by

McNary Dam, provides slack-water navigation from McNary Dam to the junction with the **Yakima River**, a distance of about 37(43) miles. Depths

in the lake are generally deep, however, there are several isolated shallow spots and rocky areas along the length of the lake. The channel through the lake is marked by aids to navigation from the Walla Walla River to Richland, 40 (46) miles above McNary Dam.

The **Port of Umatilla**, on the Oregon side, about 0.4 mile above the McNary Lock and Dam, owns a 230-foot port wharf with 800 feet of berthing space; reported depths of 20 feet are available alongside; a private company operates the wharf. A grain elevator, owned and operated by Pendleton Grain growers, Inc., has a loading rate of 20,000 bushels per hour; the grain elevator is just E of the port wharf. A barge wharf, used for receipt and shipment of petroleum products and liquid fertilizer, is just E of the grain elevator; the oil wharf is owned and operated by the Tidewater Barge Lines.

**Hat Rock State Park,** on the S side about 5.5 (6.3) miles above McNary Dam, has a public launching ramp and offers excellent protection for small craft. Gasoline is available here.

**Port Kelley**, on the E side of Columbia River, 16 (19.5) miles above McNary Dam, has a large grain elevator and facilities for handling bulk grain by rail, truck, or water. The elevator loading rate is 30,000 bushels per hour. Unlighted ranges lead clear of the rock and shoal area in the middle ground 0.4 mile W of the facility.

A small boat moorage is in the bight just NE of Port Kelley. Berths, electricity, gasoline, and water are available.

**Walla Walla River** enters Columbia River on the E side 18.4 (21.2) miles above McNary Dam. There is a public launching ramp on the S side of the river just E of the highway bridges at the entrance.

A grain wharf, at **Wallula Junction** just S of the Walla Walla River, has a grain elevator and barge loading spout with a loading rate of 20,000 bushels per hour; a reported depth of 20 feet is alongside the wharf. The wharf is owned and operated by Walla Walla Grain Growers, Inc. A barge wharf, at the **Port of Walla Walla** just S of **Attalia**, is owned and operated by Boise Cascade Corporation. The wharf ships wood pulp and receives caustic soda. A reported depth of 12 feet is alongside. About 1.9 miles S of the Snake River mouth, on the W side of Lake Wallula, is the Unocal Corporation chemical plant; anhydrous ammonia and urea are received here by barge. The dock has 480 feet of berthing space and has a reported depth of 30 feet alongside. Two white ammonia storage tanks at this plant are prominent.

The Union Pacific Railroad bridge crossing Columbia River, 27 (31) miles above McNary Dam, has a vertical lift span with a clearance of 11 feet down and 72 feet up. The bridgetender monitors VHF-FM channel 16 and works on channel 13; call sign KTD-561. (See 117.1 through 117.59 and 117.1035, chapter 2, for drawbridge regulations.)

U.S. Coast Guard Rescue Coordination Center 24 hour Regional Contact for Emergencies

RCC Seattle Commander

13<sup>th</sup> CG District (206) 220-7001 Seattle, WA

2

#### CAUTION

The depths of water within the Pool area have been determined from conditions existing prior to the filling of the Pool. Shoaler depths than charted may exist within the blue tinted areas particularly near the shoreline.

#### HEIGHTS

Heights in feet above Mean High Water

Mercator Projection Scale 1:20,000 at Lat. 45°56' North American Datum of 1983 (World Geodetic System 1984)

#### SOUNDINGS IN FEET

#### NOAA VHF-FM WEATHER BROADCASTS

The National Weather Service station listed below provides continuous marine weather broadcasts. The range of reception is variable, but for most stations is usually 20 to 40 miles rom the antenna site.

WXL-95 Pendleton, OR 162.55 MHz

#### CAUTION

Temporary changes or defects in aids to navigation are not indicated on this chart. See Local Notice to Mariners.

#### RADAR REFLECTORS

Radar reflectors have been placed on many floating aids to navigation. Individual radar reflector identification on these aids has been omitted from this chart.

#### WARNING

The prudent mariner will not rely solely on any single aid to navigation, particularly on floating aids. See U.S. Coast Guard Light List and U.S. Coast Pilot for details.

#### NOTE A

Navigation regulations are published in Chapter 2, U.S coast Pilot 7. Additions or revisions to Chapter 2 are pub shed in the Notice to Mariners. Information concerning th segulations may be obtained at the Office of the Commander 8th Coast Guard District in Seattle, Washington or at the ffice of the District Engineer, Corps of Engineers in

#### POLLUTION REPORTS

Report all spills of oil and hazardous substances to the National Response Center via 1-800-424-8802 (toll free), or to the nearest U.S. Coast Guard facility if telephone communication is impossible (33 CFR 153).

Soundings above the dam refer to normal pool elevation, which is 340 feet above mean

#### COLUMBIA RIVER

Mileage distances along the Columbia River are in Statute Miles. Distances along the Columbia River are eastward from the mouth and are indicated thus:

#### HORIZONTAL DATUM

The horizontal reference datum of this chart is North American Datum The nonzontal reterence datum of this chart is North American Datum of 1983 (NAO 83) which for charting purposes is considered equivalent to the World Geodetic System 1984 (WGS 84). Geographic positions referred to the North American Datum of 1927 must be corrected an average of 0.524" southward and 4.045" westward to agree with this chart.

#### SOURCE DIAGRAM

The outlined areas represent the limits of the most recent hydrographic survey information that has been evaluated for charting. Surveys have been banded in this diagram by date and type of survey. Channels maintained by the U.S. Army Corps of Engineers are periodically resurveyed and are not shown on this diagram. Refer to Chapter 1, United States Coast Pilot.


#### AUTHORITIES

Hydrography and topography by the National Ocean Service, Coast Survey, with additional data from the U.S. Coast Guard, Geological Survey, and the Corps of Engineers.

#### **Table of Selected Chart Notes**


ABBREVIATIONS (For complete list of Symbols and Abbreviations, see Chart No. 1.)
Aids to Navigation (lights are white unless otherwise indicated): AERO aeronautical G green Mo morse code R TR radio tower IQ interrupted quick Iso isophase LT HO lighthouse M nautical mile Al alternating N nun Rot rotating OBSC obscured
Oc occulting
Or orange s seconds
SEC sector
St M statute miles C can DIA diaphone m minutes
MICRO TR microwave tower VQ very quick W white WHIS whistle Q quick R red FI flashing Ra Ref radar reflector R Bn radiobeacon Y yellow Bottom characteristics: Blds boulders Oys oysters Sh shells bk broken G gravel Cv clay M mud Grs grass S sand sy sticky Miscellaneous: Obstn obstruction PA position approximate Subm submerged AUTH authorized PD position doubtful ED existence doubtful Rep reported 21. Wreck, rock, obstruction, or shoal swept clear to the depth indicated. (2) Rocks that cover and uncover, with heights in feet above datum of soundings


This nautical chart has been designed to promote safe navigation. The National Ocean Service encourages users to submit corrections, additions, or comments for improving this chart to the Chief, Marine Chart Division (N/CS2), National Ocean Service, NOAA, Silver Spring, Maryland 20910-3282.

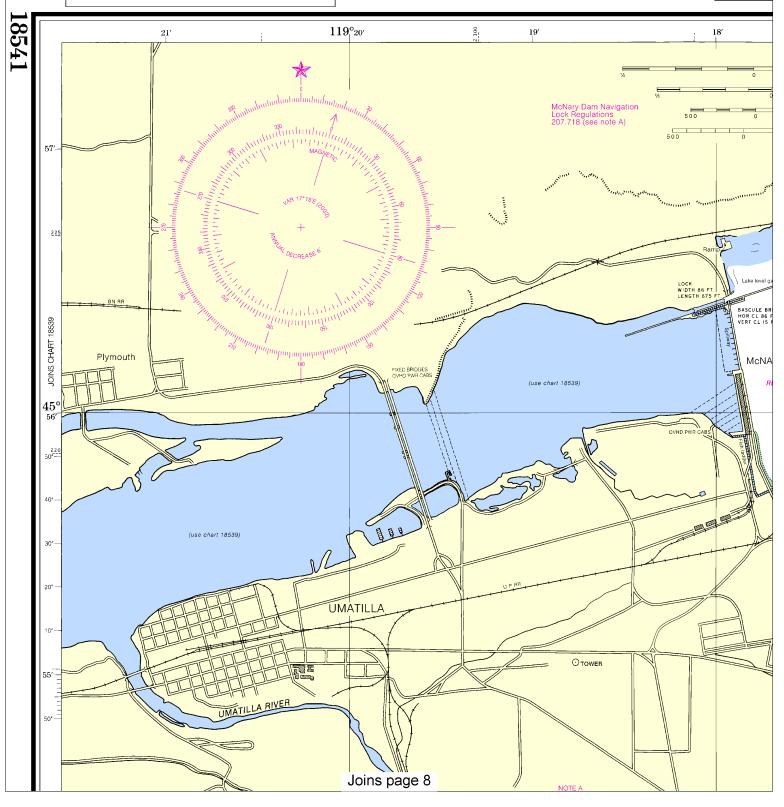

4




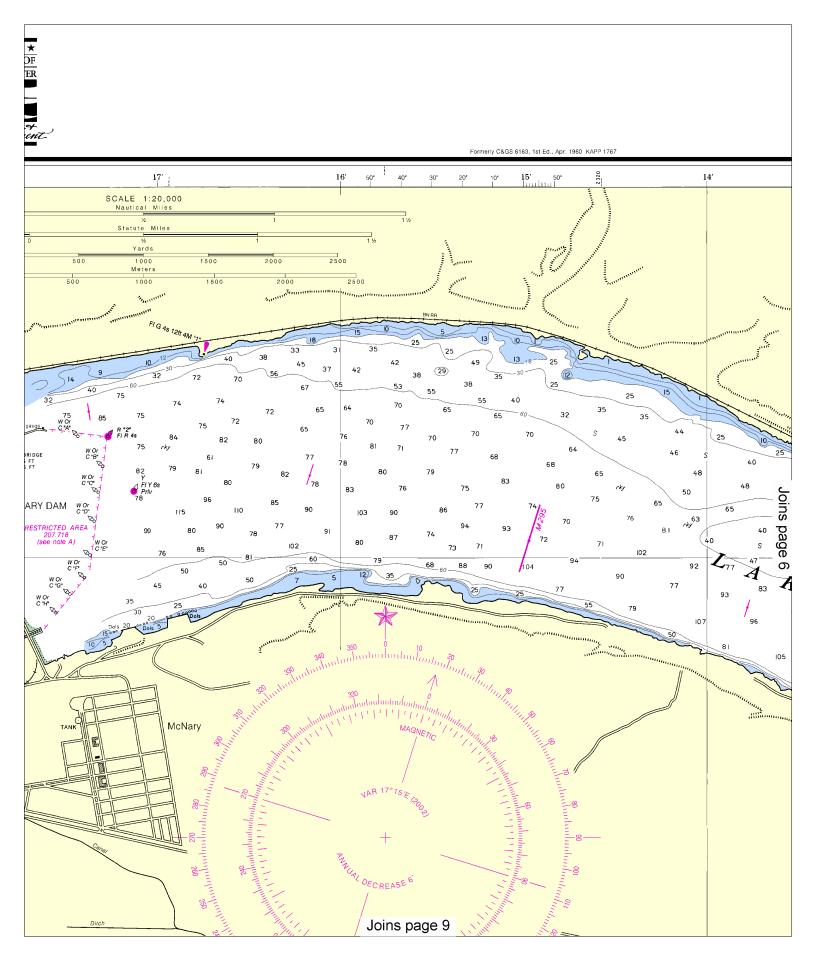


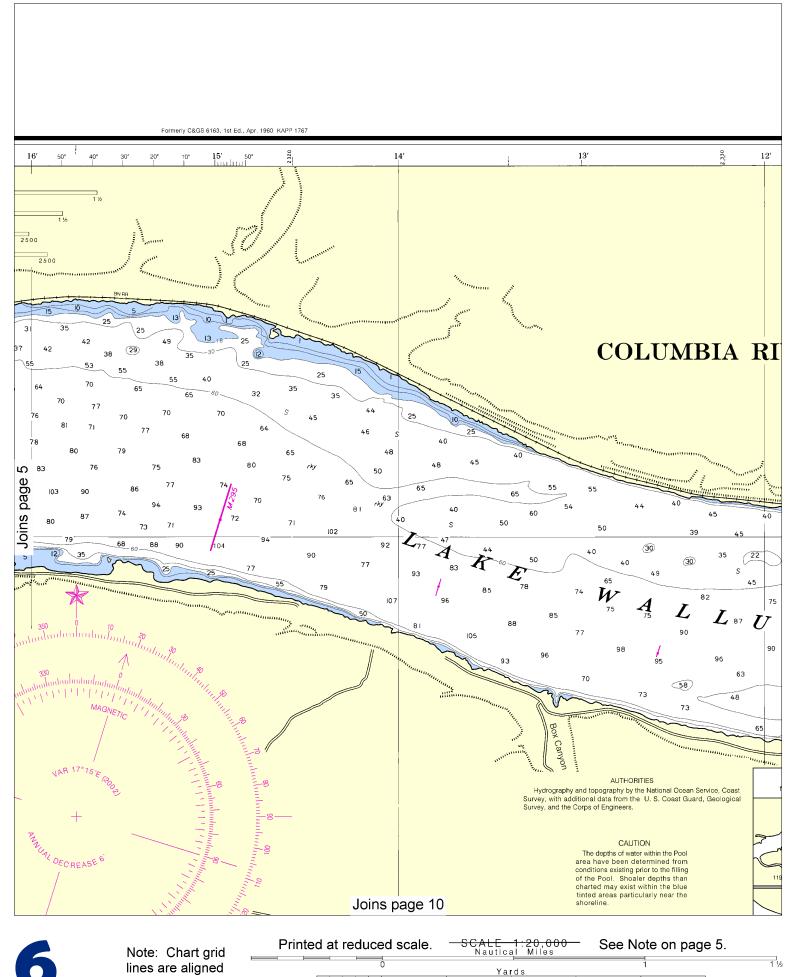



with true north.

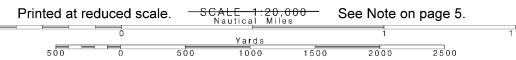


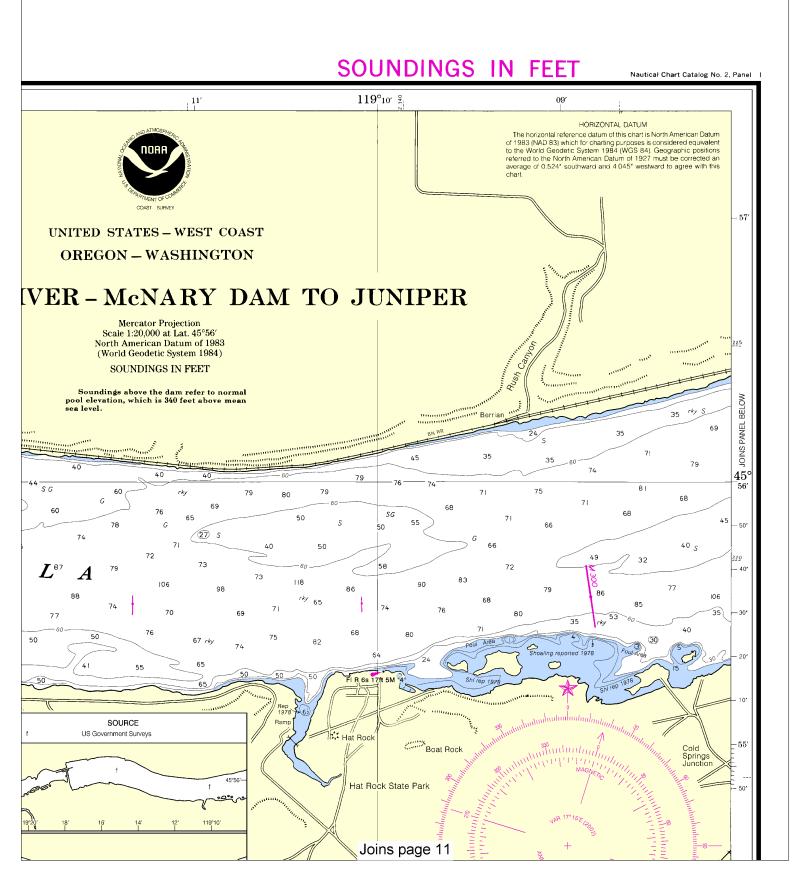

This BookletChart has been updated through: Coast Guard Local Notice To Mariners: 4812 11/27/2012,


NGA Weekly Notice to Mariners: 4812 12/1/2012,


Canadian Coast Guard Notice to Mariners: 0912 9/28/2012.

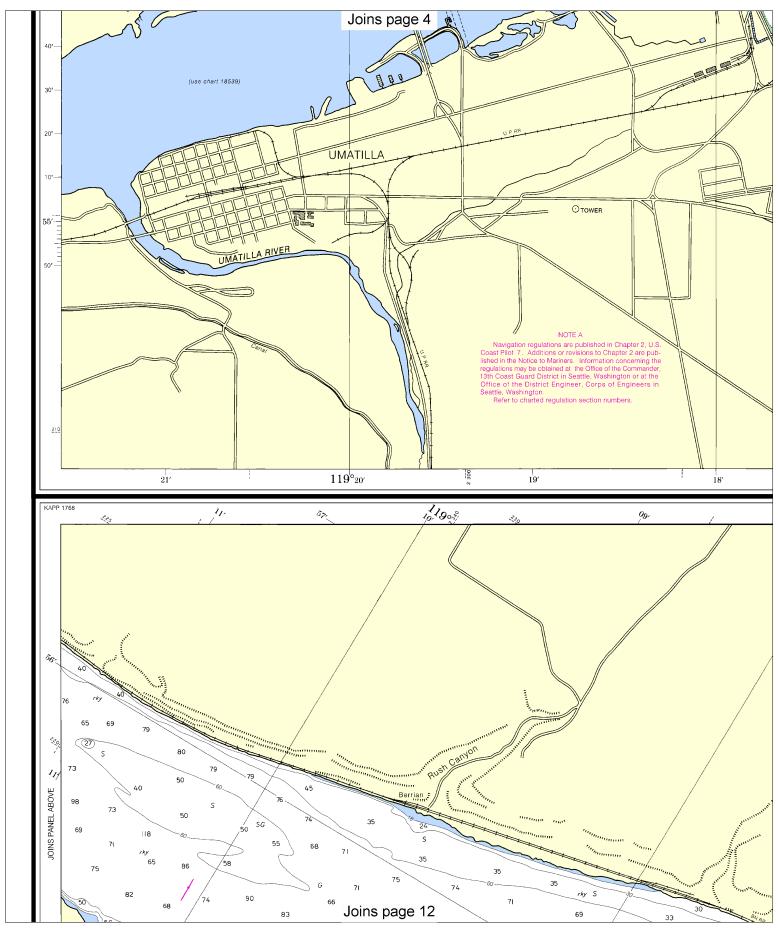


8




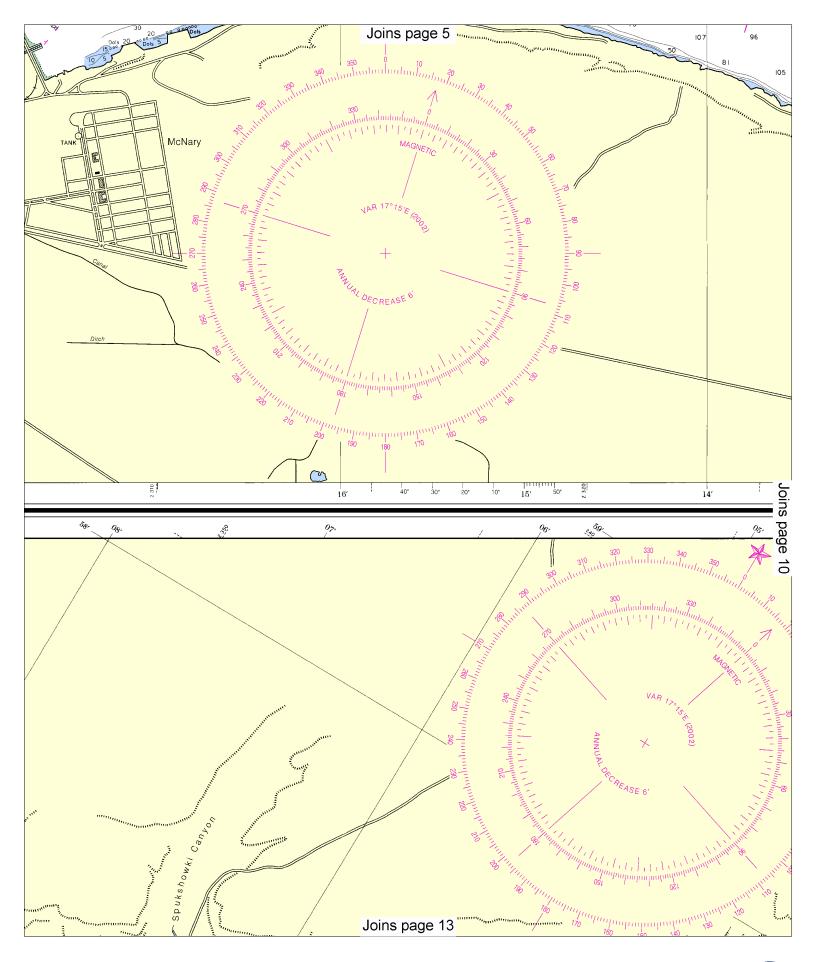


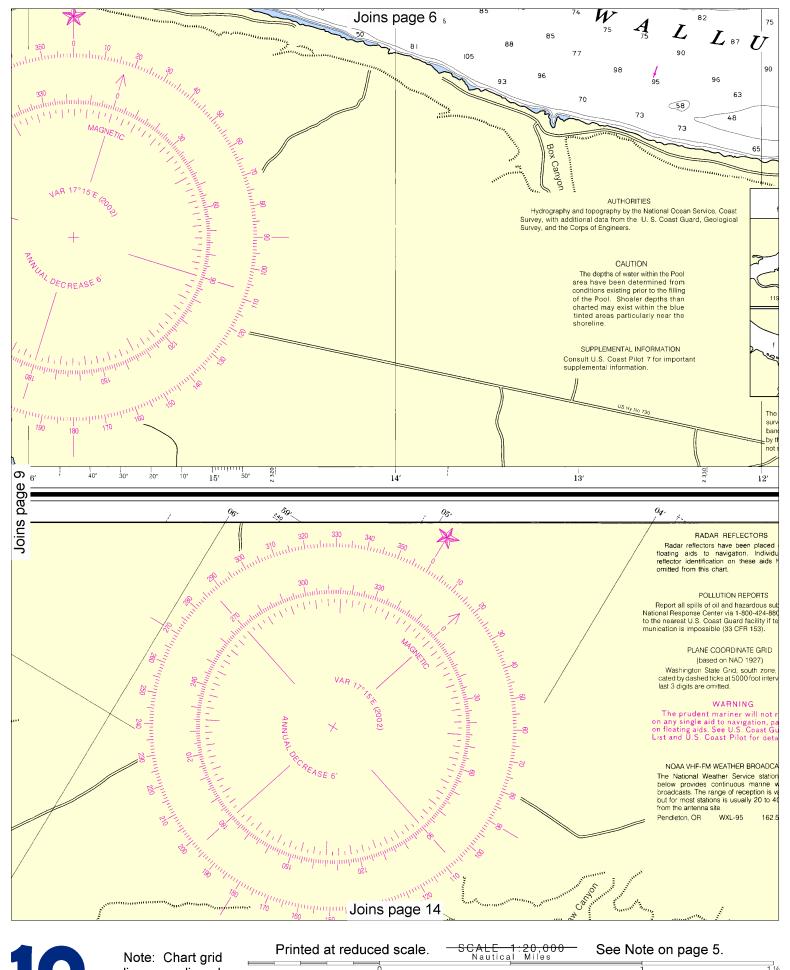


lines are aligned with true north.

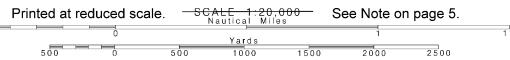


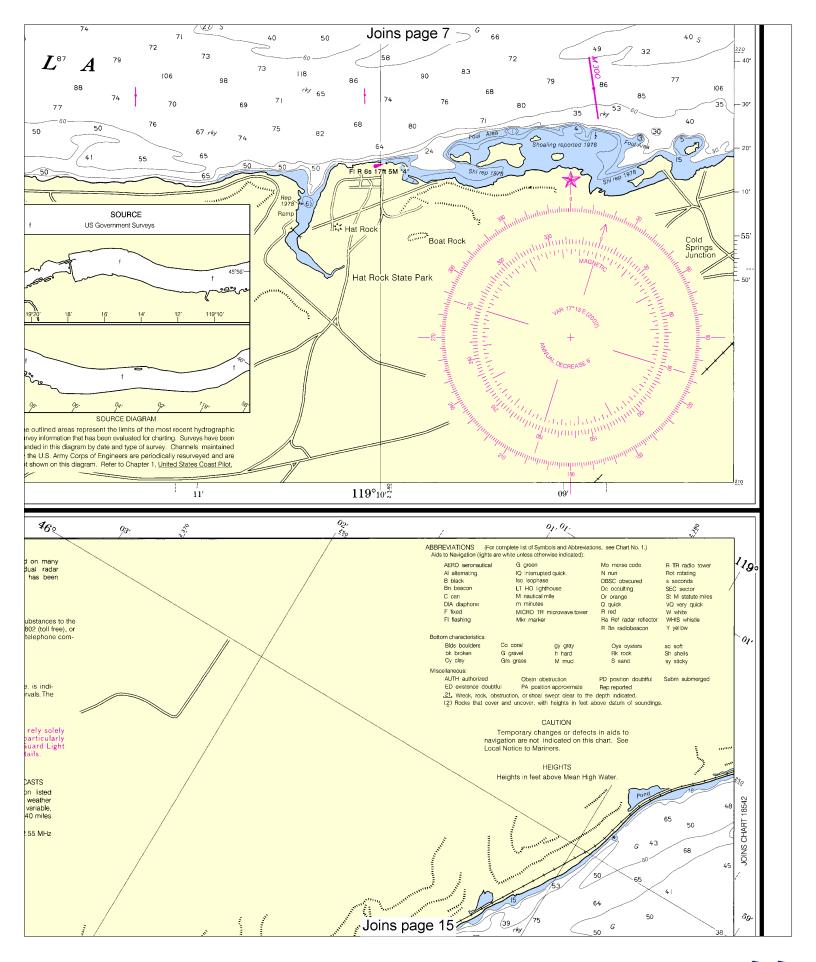


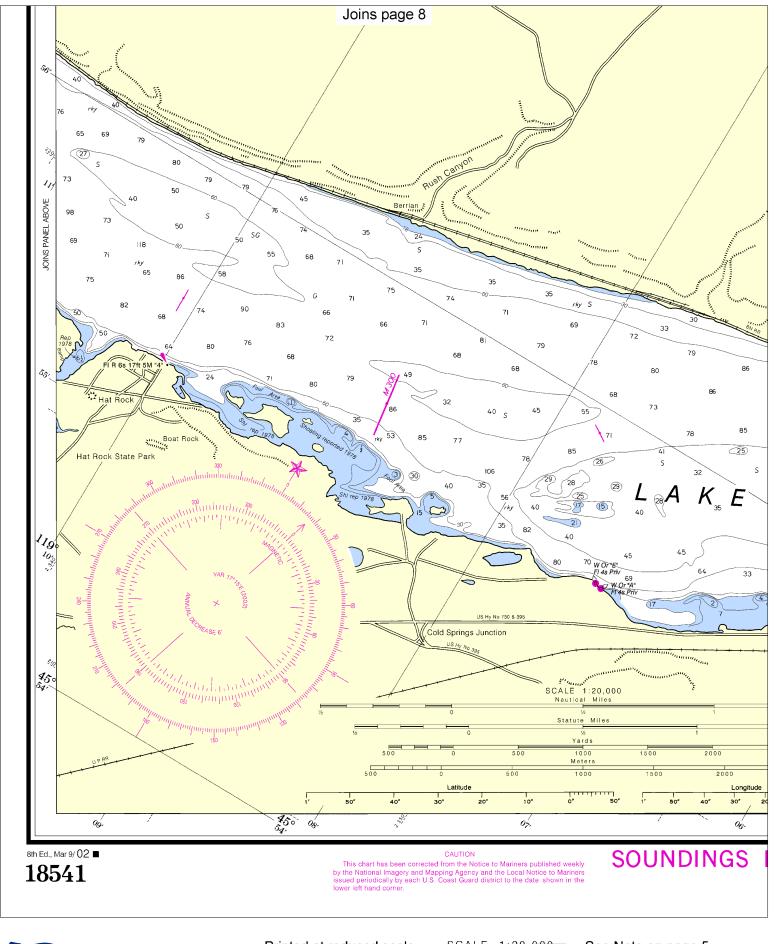


12

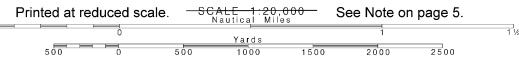


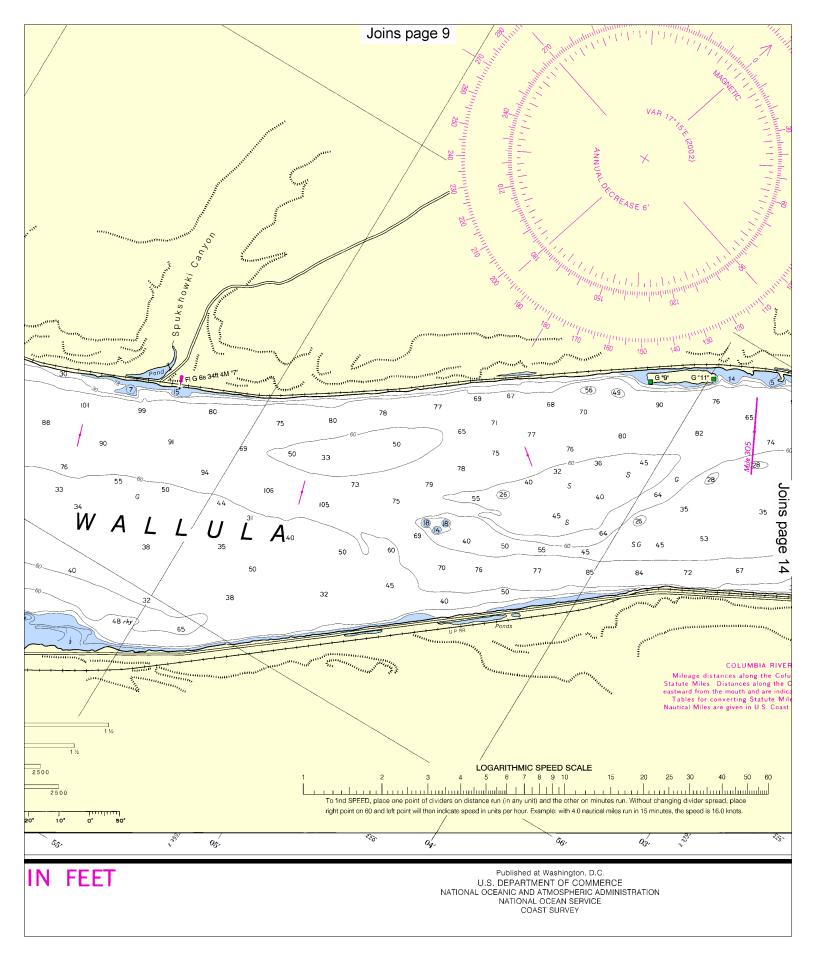

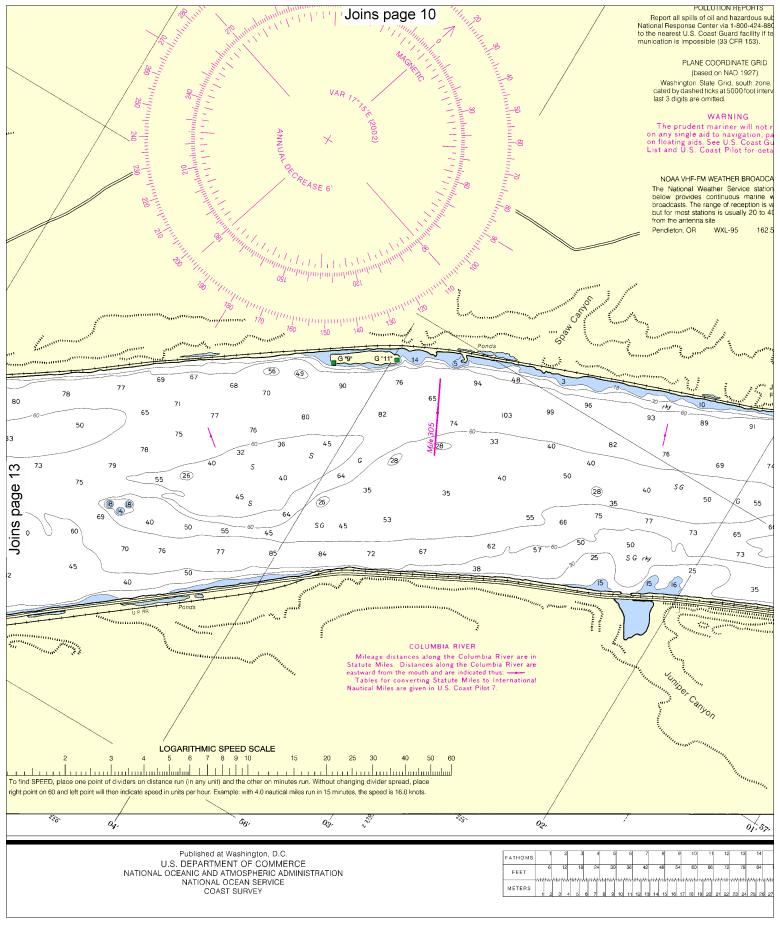

14

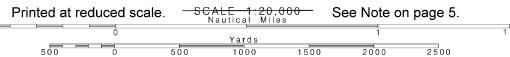

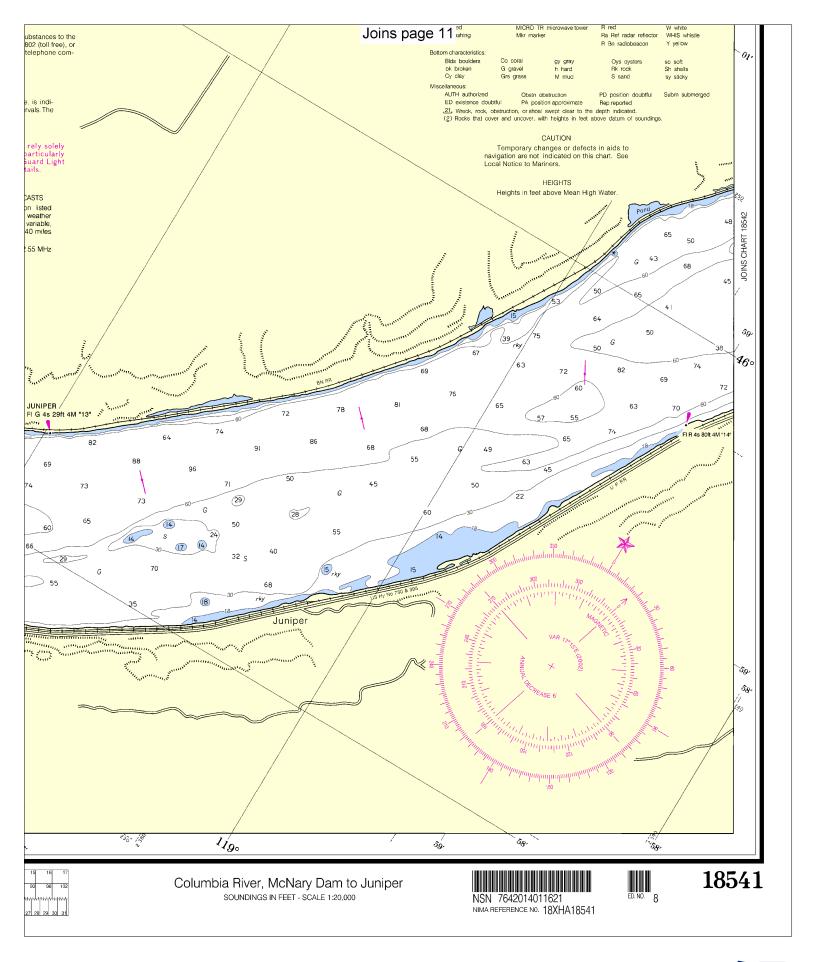



#### VHF Marine Radio channels for use on the waterways:

**Channel 6** – Inter-ship safety communications.

Channel 9 – Communications between boats and ship-to-coast.

Channel 13 – Navigation purposes at bridges, locks, and harbors.

Channel 16 – Emergency, distress and safety calls to Coast Guard and others, and to initiate calls to other

vessels. Contact the other vessel, agree to another channel, and then switch.

Channel 22A – Calls between the Coast Guard and the public. Severe weather warnings, hazards to navigation and safety warnings are broadcast here. Channels 68, 69, 71, 72 and 78A – Recreational boat channels.

**Getting and Giving Help** — Signal other boaters using visual distress signals (flares, orange flag, lights, arm signals); whistles; horns; and on your VHF radio. You are required by law to help boaters in trouble. Respond to distress signals, but do not endanger yourself.

#### **Distress Call Procedures**

- Make sure radio is on.
- Select Channel 16.
- Press/Hold the transmit button.
- Clearly say: "MAYDAY, MAYDAY, MAYDAY."
- Also give: Vessel Name and/or Description; Position and/or Location; Nature of

Emergency; Number of People on Board.

- · Release transmit button.
- Wait for 10 seconds If no response Repeat MAYDAY call.

HAVE ALL PERSONS PUT ON LIFE JACKETS!



NOAA Weather Radio All Hazards (NWR) is a nationwide network of radio stations broadcasting continuous weather information directly from the nearest National Weather Service office. NWR broadcasts official Weather Service warnings, watches, forecasts and other hazard information 24 hours a day, 7 days a week.

http://www.nws.noaa.gov/nwr/

#### **Quick References**

Nautical chart related products and information — http://www.nauticalcharts.noaa.gov

Online chart viewer — <a href="http://www.nauticalcharts.noaa.gov/mcd/NOAAChartViewer.html">http://www.nauticalcharts.noaa.gov/mcd/NOAAChartViewer.html</a>

Report a chart discrepancy — http://ocsdata.ncd.noaa.gov/idrs/discrepancy.aspx

Chart and chart related inquiries and comments — http://ocsdata.ncd.noaa.gov/idrs/inquiry.aspx?frompage=ContactUs

Chart updates (LNM and NM corrections) — http://www.nauticalcharts.noaa.gov/mcd/updates/LNM\_NM.html

Coast Pilot online — http://www.nauticalcharts.noaa.gov/nsd/cpdownload.htm

Tides and Currents — http://tidesandcurrents.noaa.gov

Marine Forecasts — http://www.nws.noaa.gov/om/marine/home.htm

National Data Buoy Center — http://www.ndbc.noaa.gov/

NowCoast web portal for coastal conditions — http://www.nowcoast.noaa.gov/

National Weather Service — http://www.weather.gov/

National Hurrican Center — http://www.nhc.noaa.gov/

Pacific Tsunami Warning Center — http://ptwc.weather.gov/

Contact Us — http://www.nauticalcharts.noaa.gov/staff/contact.htm



For the latest news from Coast Survey, follow @nauticalcharts



This Booklet chart has been designed for duplex printing (printed on front and back of one sheet). If a duplex option is not available on your printer, you may print each sheet and arrange them back-to-back to allow for the proper layout when viewing.

